



# User Manual

Talent-MG2-WU

Talent-MG2-GU

# CONTENT

Read Me First .....	1
Warning .....	1
Contact .....	1
Talent-MG2 Monitoring System .....	2
Packing List .....	2
Product Appearance .....	2
Technical Data .....	3
Installation .....	4
Wi-Fi Configuration (Only Talent-MG2-WU) .....	5
LED Description .....	6
Website Configuration .....	7
Step 1: Install the microinverter and the monitoring device .....	7
Step 2: Establish an account .....	7
Step 3: Networking for the monitoring system .....	8
Step 4: Create a Plant .....	9
Step 5: Edit the system layout .....	11



## Read Me First

Dear customer, thank you for choosing the TSOL-M Series micro inverter from TSUN-NESS. We hope you will find our products meet your needs for renewable energy. Meantime, we appreciate your feedbacks regarding our products.

This manual contains important instructions for Talent-MG2 Monitoring System. For safety, only qualified technician, who has received training or has demonstrated skills can install Talent-MG2 Monitoring System under the guide of this document.

## Warning

- Only qualified personnel should install, troubleshoot, or replace the monitoring system.
- Before installation, check the unit to ensure absence of any transport or handling damage, which could affect insulation integrity or safety clearances.
- All repairs should be carried out using only qualified spare parts, which must be installed in accordance with their intended use and by a licensed contractor or authorized TSUNESS service representative.

## Contact

If you have technical problems about our products, contact the TSUN Service line.

### TSUNESS Co., Ltd

Tel: +86-573-8466 8569


E-mail: sales@tsun-ess.com | www.tsun-ess.com

Add: Building E1, No. 555, Chuangye Road, Dayun Town, Jiashan County,  
Jiaxing City, Zhejiang Province, China

# Talent-MG2 Monitoring System


The Monitor Device is the key component in Talent-MG2 monitoring system. It is the relay station of the monitoring system, which operates between the microinverters and the Monitoring Server. The Monitor Device communicates with the microinverters in the system via 2.4G RF wireless to collect the data and status of the microinverters in the system. At the same time, Monitor Device connects to the Internet through WIFI (Talent-MG2-WU) or GPRS (Talent-MG2-GU), which realizes the information exchange with the monitoring service and sends all the running data of microinverters and status of the system to the monitoring server. It receives the control commands from the monitoring server and sends the data to the microinverters in the system to achieve remote operation and maintenance.

## Packing List

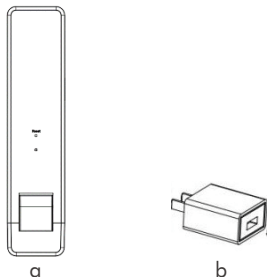

Object	Description	Quantity
a	Monitor Device	1
b	Adaptor	1

## Product Appearance



Object	Description
A	USB Connector
B	LED
C	Reset Hole
D	SIM Card Slot

\* Only Talent-MG2-GU has a SIM Card Slot.


## Technical Data

Model	Talent-MG2-WU	Talent-MG2-GU
<b>Communication to Microinverter</b>		
Signal	2.4G RF	
Maximum Distance(Open Space)	100m	
Monitoring Data Limit	99 panels	
<b>Communication to Server</b>		
Sample Rate	Per 15 minutes	
Signal	WIFI(2.4GHz)	GSM
<b>Power Supply (Adapter)</b>		
Type	Adapter with USB port	
Input Voltage/Frequency	100 to 240V AC / 50 or 60Hz	
Output Voltage/Current	5V DC / 2A	
Power Consumption	1.0W(typical), 5W(maximum)	
<b>Mechanical Data</b>		
Ambient Temperature(°C)	-20~+55	
Dimensions (W*H*D mm)	143*33*12.5	
Weight (kg)	0.1	
Mounting System	Plug-in	
Indicator Light	LED	


## Installation

---

1. Plug the USB connector into the adapter.

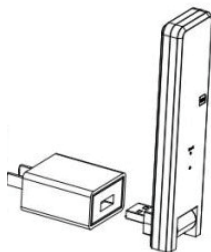

2. Plug the adapter into a wall socket or a socket on the table.

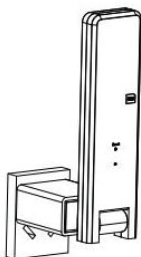

\*The wall socket or the table should be more than 1 meter above the ground.

\*The table should not be metal or concrete structure (to prevent the effects on 2.4G RF signal).

3. Place the monitoring device as far as 90 degrees vertically upwards.

\*The distance between the monitoring device and the router should be as close as possible.

## Wi-Fi Configuration (Only Talent-MG2-WU)

---

1. Connect the wireless name of MG2-WU via computer or mobile phone.
2. Open the browser and enter 10.10.100.254 to open the Wi-Fi configuration page. The username and password are 'admin' by default.
3. Click the Wi-Fi parameter menu on the left menu bar to enter the Wi-Fi parameter configuration.



4. Click the search button in the lower right corner, select the Wi-Fi name to be connected to the monitoring device.

5. Enter the password and click Save.

STA Mode

Network Name(SSID):

STA Password:

DHCP:

6. Click Restart.

System Status	Save Success	help
WiFi Setting	<p>Save Success!</p> <p>Configurations will take effect after restart.</p> <p>After restart, you will need to re-login the configuration interface for other settings, so it is recommended to restart after completing all settings.</p> <p>Please click [Restart] to restart now, or click [Back] to continue setting.</p> <p>You can restart after all configuration.</p>	<ul style="list-style-type: none"> <li>• <b>Restart:</b> Parameters take effect after restart</li> </ul>
Trans Setting	<input type="button" value="Restart"/>	
System Setting		
Firmware Update		

## LED Description

	LED Light	Red	Blue	Green	Red+Blue+Green
1	Power-on				Alternate Bright (1s)
2	Upgrade procedure				Alternate Shining (1/3s)
3	normal operation			Bright	
4	ID search is not complete			Shining	
5	Not ID		Bright		
6	Not connected to WIFI	Bright			
7	Server not connected	Shining			
8	Receive server data		Shining		




## Website Configuration

### Step 1: Install the microinverter and the monitoring device


1. Install the microinverter system. Please read the Quick Installation Guide or the User Manual of microinverter on [www.tsun-ess.com/downloads](http://www.tsun-ess.com/downloads) before installation.
2. Install the monitoring device. Connect the power adapter into the socket
3. Make sure the microinverter system and the monitoring device are working well.

### Step 2: Establish an account

1. Visit the monitor website [pro.solarmanpv.com](http://pro.solarmanpv.com) directly. Or enter this monitor website by the official website of TSUNESS [www.tsun-ess.com](http://www.tsun-ess.com).

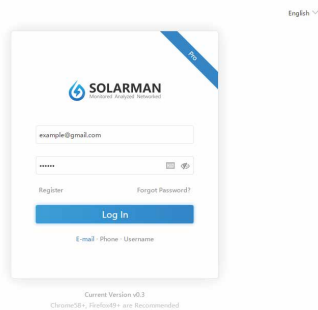


2. Click the "Register" button and register a new account.

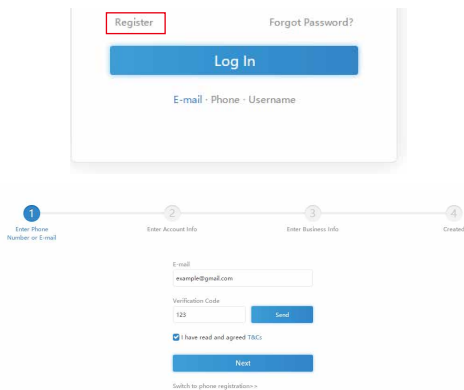


## Step 3: Networking for the monitoring system


1. Login to the platform and find the “Network” page by Applications → Network.  
(Please make sure that the monitoring device has already connected to the server.)

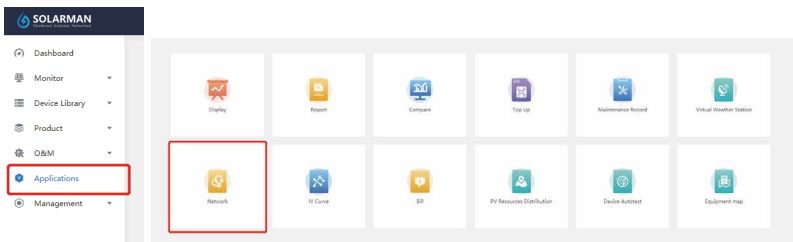

2. Click “+Select” to input the SN of monitoring device.

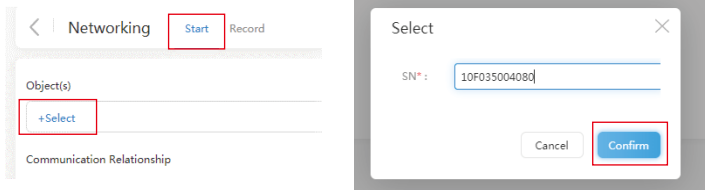

3. Click “Upload Network Relationship” to download the template file. After editing the file, click “Select a File” to upload file.

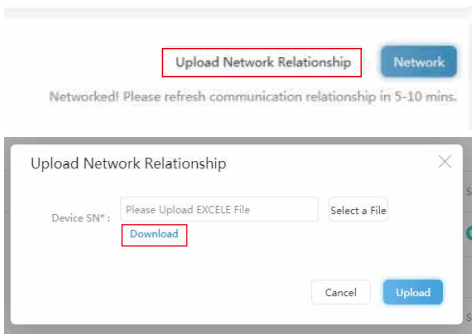



## Create a Plant:

Basic Info

System Info

Visual Info

Owner Info

Basic Info

\*Name:

Demo plant

\*Location:

Please enter plant address

3. Click “Save” and add a monitoring device in this plant. Click “add a New Gateway/Logger” and input the SN of the monitoring device.

Created! Please continue the following steps.

Add a New Gateway/Logger

Please enter a gateway/logger ID which belongs to the plant, system will get data from the gateway/logger and its sub-system. You can skip it now and do it later in Plant Details.

SN:

Authorize Users

Other users are eligible to check the plant after your authorization. You can skip it now and do it later in Plant Details.

Authorize Business Units

Other business units are eligible to check the plant after your authorization. You can skip it now and do it later in Plant Details.

Authorize Internal Members

Other internal members are eligible to check the plant after your authorization. You can skip it now and do it later in Plant Details.

Select Tags

You can tag the plant, which is convenient for you to spot it. You can skip it now and do it later in Plant Details.


Add a New Sub-system

Add a New Gateway/Logger

SN:

Add

4. All the plants can be viewed and managed in “Plants” page.

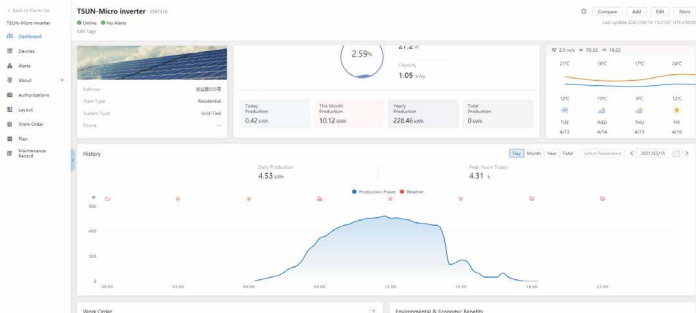


## Step 5: Edit the system layout

1. Find the "Plants" page by Monitor → Plants → "plant name". Then enter the "Layout" page and click "Click here to edit system layout".




2. Drag the components to the right side to finish the physical layout.

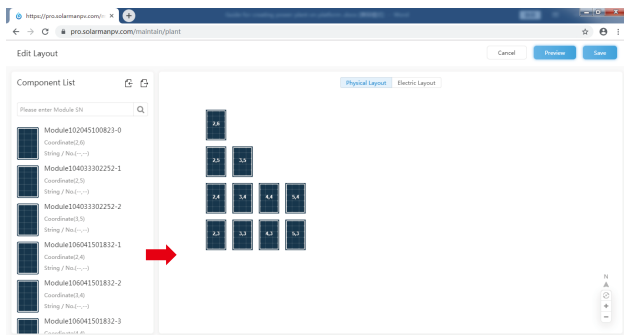



**TSUNESS Co., Ltd**

 [www.tsun-ess.com](http://www.tsun-ess.com)

 [sales@tsun-ess.com](mailto:sales@tsun-ess.com)

Building D2, No. 555, Chuangye Road , Jiaxing ,  
Zhejiang Province, China